


Timber

COLLECTION 2019 - 2020 AUSTRALIA

The start of something beautiful

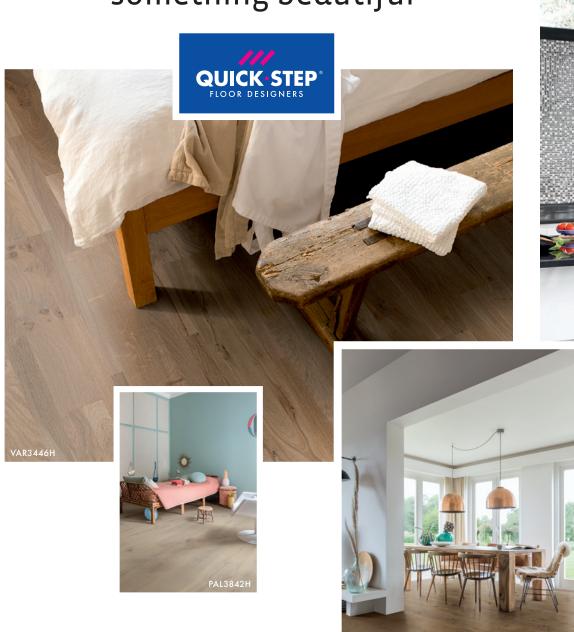





Welcome

- **04** Discover our passion for wood
- 06 Authentic beauty meets easy living
- 08 Authentic beauty that lasts a life time

Collection

- 10 Create your own living space
- 14 Let us guide you to the perfect floor
- 16 Range overview
- 18 The details make the difference
- 20 Discover the full timber collection

Installation

- 24 Install your floor without a hassle
- 25 Underlay is not an idle luxury

Finishing


26 Finish beautifully

Maintenance

28 Keep your floor in top condition

Matching accessories guide

Discover our passion for...

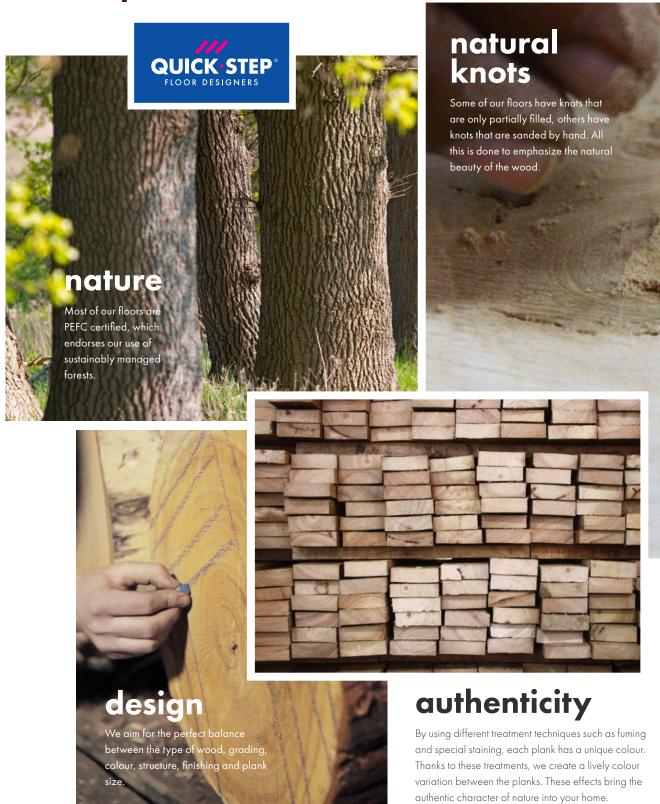



artisan characteristics

Saw cuts are tangible evidence of pure craftsmanship. The manually applied saw cuts vary both in depth, width and frequency. Not a single plank is identically



wooden textures

maintain.

A brushed finish accentuates the natural grain of the wood and creates an extra authentic feel.

Some of our floors look as matte as untreated wood, and are also easy to

Authentic beauty meets easy living



Maximum pleasure, easy maintenance





All Quick-Step timber floors are finished with an advanced lacquer to give your floor added resistance to wear, marks and scratches. The

new water-repellent Protect+ technology also helps to prevent water from penetrating between joints of your floor as this often makes joints look tired or stained. This helps to keep the joints between the planks looking as good as new. Thanks to the unique combination of this new technology and our authentic floor designs, you will be able to enjoy your floor's beauty for years to come.

UNIQUE INNOVATION!

SURFACE & EDGE PROTECT+ TECHNOLOGY


Our new Surface & Edge Protect+ technology can help to prevent mud, spilled foods and other dirt from getting stuck in the joints and texture of the wood. This will help to make your Quick-Step timber much easier to clean (to read more, see p. 8-9).

Quick-Step Timber, the beauty of nature

100% WOOD Welcome the beauty of nature into your home by choosing a 100% real timber floor from Quick-Step. With a wide choice of different plank sizes and natural colours, you will find the perfect

floor for your style and interior. We pay extra attention to the knots, grain and colour of the planks so you get to enjoy the warmth of a handcrafted timber floor.



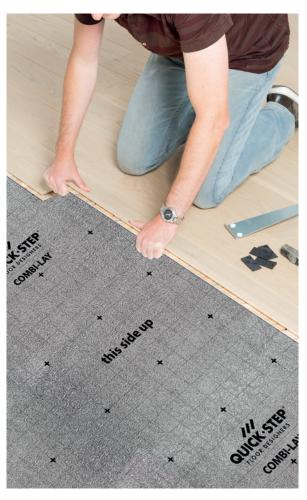

A perfectly installed floor is just a few clicks away

A timber floor that's easy to install? Quick-Step makes it possible. Whether you decide to do it yourself or have it done by a professional, your new floor can be installed in no time, thanks to the Uniclic® Multifit system. This click system enables you to click the planks together, using three different methods. Visit www. quick-step.com.au for more information.

Another great advantage of Quick-Step timber floors: there's no need for post-installation work in order to start living on your floor. No sanding, no dust, no varnishing, oiling or painting. As soon as your Quick-Step Timber floor is installed, it's yours to enjoy for years to come.







How to install your timber floor

Installing a Quick-Step Timber floor is very easy. Let us help you out with our installation videos at bit.ly/ytquickstep

Enjoy your timber floor worry-free thanks to its unique coating

If you're opting for a timber floor, you'll want to retain its authentic beauty for as long as you can. Timber floors from Quick-Step have been designed with exactly this in mind, and with the aim of creating warmth in the home for many years of enjoyment without worry.



Resistance to wear and tear

Sliding chairs, high heels, children playing... floors go through a lot. All Quick-Step timber floors have an additional, high-quality protective layer of lacquer.



For extra protection against dirty edges and joints



Thanks to the unique, moisture-repellent joint technology Edge Protect+, there's no need to worry if you spill something or while cleaning, as Edge Protect+ stops fluids from seeping into the timber and dirtying the joints,

keeping the space between the planks clean and looking fresh for years to come, even with frequent cleaning.



WITHOUT EDGE PROTECT+ TECHNOLOGY



WITH EDGE PROTECT+ TECHNOLOGY

UNIQUE INNOVATION FROM 2019 SURFACE PROTECT+ TECHNOLOGY

Cleaning your timber floor is now easier than ever

Muddy boots, chocolate sauce, wine or other dirt on your timber floor? No need to worry! Your Quick-Step timber floor with lacquer finish is now even easier to keep clean.





Surface Protect+ technology prevents dirt and grime from being trapped within the open grain of your timber floor. This means a timber floor that looks better for longer, even with repeated cleaning.

Looking for a timber floor that is easy to maintain? Quick-Step has exactly what you're looking for.



WITHOUT SURFACE PROTECT+ TECHNOLOGY




WITH SURFACE PROTECT+ TECHNOLOGY

Create your own living space



A beautiful interior starts with a good foundation. Whatever your style, whatever your room, Quick-Step has the right floor: from light, sleek floors to warm brown classics and even reclaimed floors with knots and cracks.

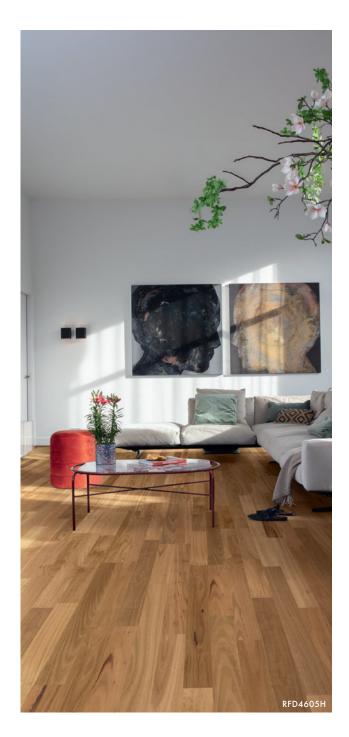











Did you know that Quick-Step Timber floors have an abrasion resistance greater than most of the competition? This is achieved through the high quality of our specially designed European lacquer and its unique application.













Let us guide you to the perfect floor

Choosing a new floor can raise a lot of questions: which colour should I go for? Which floor matches my style and my interior? Check out our FloorExplorer and RoomViewer online – we will help you make up your mind.

FLOOR EXPLORER

3 EASY STEPS TO FIND YOUR PERFECT FLOOR

With so many flooring options to choose from, making the right decision can be a challenge. That's why we have introduced the online FloorExplorer tool: in three simple steps, you will get a selection of floors that perfectly match your personal needs and style.

Why not give it a try?
Enter the FloorExplorer at
www.quick-step.com.au

SELECT A ROOM 2 CHOOSE A COLOUR

3 DEFINE YOUR STYLE



ROOM VIEWER

GET A PREVIEW OF YOUR FAVOURITE FLOORS

Wouldn't it be great if you could try out several floors first before making a final decision? Or even preview them in your own interior? With the online RoomViewer tool, you can do just that. Get lifelike previews and make sure that your final decision is the right one.



Try it out now!
Launch the RoomViewer at
www.quick-step.com.au



DISCOVER YOUR PERFECT FLOOR ON WWW.QUICK-STEP.COM.AU

Range overview

dimensions **READYFLOR XL** 220 x 18.6 cm 1 strip **READYFLOR - AUSTRALIAN** 243 x 13.4 cm 1 strip **READYFLOR - INTERNATIONAL** 243 x 14.5 cm 1 strip **READYFLOR** 220 x 18.6 cm **READYFLOR** 220 x 19 cm 3 strip **PALAZZO** 220 x 19 cm 1 strip **VARIANO** 220 x 19 cm multistrip (styles may vary)


182 x 14.5 cm

 $182 \times 13 \text{ cm}$

Product build-up

COMPACT

1 strip

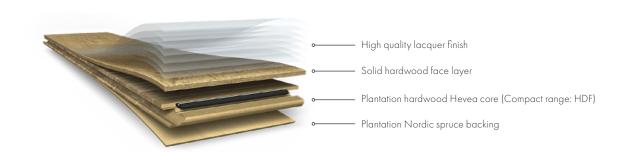

thicknes	ss grooves	build-up	pack	warranty
<u>÷</u> 14 m	m 🛂	IIIIIII HEYFAIIIIIII	6 x = 2.455 m ² *	UITSTIME WARRANTY SOMETING OF WARRANTY SOMETING OF WARRANTY SOMETING OF WARRANTY
≑ 14 m	m 💸	IIIIIII HEYFA IIIIIIII	5 x = 1.628 m ² *	LIFSTIME WARRANTY DOMENT OF WARRANTY COMMENT OF WARRANTY
<u>÷</u> 14 m	m 💸	IIIIIII HEYFAIIIIIII	5 x = 1.762m ² *	UPSTIME WARRANTY COMBIN, OR UPSTIME WARRANTY COMBIN, OR UPSTIME WARRANTY COMBIN, OR
<u>÷</u> 14 m	m 💸		6x	LITETIME WARRANTY COMMING ONE LOCALITY OF COMMING ON THE COMMING
<u>÷</u> 14 m	m 💸	######################################	6 x = 2.508 m ²	UPTIME WARRANTY COMERCOR
<u>÷</u> 14 m	m <u>2/4</u>	IIIIIIII DEVAIIIIIIII	6 x = 2.508m ² *	UPTIME WARRANTY SOMETIME OF THE PROPERTY OF T
<u>÷</u> 14 m	m 💸		6 x = 2.508m ² *	WARRANTY SOMETIK OF WARRANTY SOMETIK OF
÷ 12.5 r	nm 🛂	······································	6× = 1.583 m²/1.419m²*	25 YEAR WARRANTY LONGING ST. ST. STARR WARRANTY COMMITTEE STARR WARRANTY COMMITTEE ST. STARR WARRANTY COMMITTEE STARR WARR



Please note: Many 1 strip products feature shorter boards. At Quick-Step, we know that when you want a stunning 1 strip floor, you don't want it full of short boards, that's why we have produced longer boards than almost every other brand, to give you the look you want. Our balance of short boards adds authenticity to your floor. This costs a little more, but looks so much better. Another great reason to buy a Quick-Step floor.









All timber ranges are PEFC certified, except ReadyFlor, which is sourced from sustainable forestry

^{*} up to 6 shorter boards per pack

The details make the difference

Each timber floor has its own story and a unique look and feel. The Quick-Step designers carefully select the structure, treatment, finishing and bevel, perfectly in line with the character of each floor design.

Types of wood



Blackbutt

Blackbutt is an Australian hardwood with excellent hardness. It may contain prominent gum veins, insect marks as well as some fine surface cracks. Not recommended with heated subfloors



Tasmanian Oak

Tasmanian Oak is a blend of pink/straw coloured hardwood species of moderate hardness from Tasmania. Some small surface splits or surface checks are an occasional characteristic of Tasmanian Oak.



Spotted Gum

Spotted Gum is an Australian hardwood with wide colour variation and excellent hardness. It may contain some fine surface cracks. This wood species is not recommended with heated subfloors.



Sydney Blue Gum

Sydney Blue Gum is an Australian hardwood with wide colour variation and excellent hardness.



A Jarrah

Jarrah is a very durable hardwood from WA, which ranges in colour from pale pink/grey to deep reds. It will darken, turning a deeper red and more uniform in colour.




Oak

European Oak is extremely popular and ranges in colour from pale straw to mid brown. Knots and medullary rays are a real feature of this stunning hardwood..



Merbau

Merbau is a reddish brown hardwood of excellent durability from South East Asia. It often contains a small yellowish fleck in the grain.





The rating is a measure of the resistance of the wood to indentation. The higher the number, the more indentation resistant the timber.

Finishing

All Quick-Step Timber floors are prefinished in the factory, which means no oiling or lacquering is needed directly after installation.

Lacquered finish

_______ Extra matt






Low Sheen



- 7 layers of protective lacquer.
- Highly scratch and wear resistant.
- Protects against household chemicals.
- Easy to clean timber floor.



Masters of our craft

At Quick-Step, we're passionate about the beauty of wood. That's why we only use the finest wood for our timber floors. We work with traditional, high-quality materials and handle them with the greatest care and attention, yet we never cease to innovate when it comes to interior design. Learn more about our passion on page 4 - 5.

Grading

All Australian wood varieties are graded as per AS2796 Standard and better. This grade includes knots, gum veins, fine cracks, and other natural features of Australian Eucalypts. For oak we have a unique grading system that sorts our floors into three different categories. It gives you an idea of how your floor will look. Quick-Step Oak flooring is available in 1 of 3 grades:



Nature

Wood with small knots. Light variation in colour and structure.



Marquant

Wood with large knots. Lively variation in colour and structure.



Vibrant

Wood with large knots and small cracks. Lively variation in colour and structure with a rustic appearance.



Treatment



Brushed Deep Brushed

Brushing accentuates the natural grain structure of the timber plank and adds depth.



Saw cuts

Random saw marks show the craftsmanship and character of the timber planks.



<u></u> Timeworn

Sloping, slightly worn edges create an aged look. End bevels will show natural variations



Natural knots

On some floors the knots are not fully filled. Some of them are even manually sanded to emphasize the liveliness of the wood.



Reclaimed look

Our Variano floors are designed with a reclaimed look: showing saw cuts, height differences and small gaps. See p. 23.



Design colours

By using different treatment techniques such as fuming and staining, each plank has a unique colour.



MATT BRUSHED BLACKBUTT 1 STRIP*



MATT BRUSHED SPOTTED GUM 1 STRIP*
RFXL3848H



READYFLOR 1 STRIP

Stunning floors made from some of the world's finest hardwoods."

RFS 243 x 13.4 (Merbau 14.5) cm = 14 mm



TASMANIAN OAK 1 STRIP
RFS4602H



MATT BRUSHED SPOTTED GUM 1 STRIP RFS4606H





SYDNEY BLUE GUM 1 STRIP RFS4604H



MATT BRUSHED BLACKBUTT 1 STRIP
RFS4605H



∴ ⋄ MERBAU 1 STRIP RFS4599H



SPOTTED GUM 1 STRIP
RFS4601H



-**Q-JARRAH 1 STRIP** RFS4603H

READYFLOR 2 STRIP



TASMANIAN OAK 2 STRIP



-Ö---O--BLACKBUTT 2 STRIP RFD4600H



MATT BRUSHED BLACKBUTT 2 STRIP
RFD4605H



. ∴.~~ SPOTTED GUM 2 STRIP RFD4601H



<u> →</u> • MATT BRUSHED SPOTTED GUM 2 STRIP



. ∴ ~ ~ SYDNEY BLUE GUM 2 STRIP
RFD4604H



<u>-☆-</u>---MERBAU 2 STRIP RFD4599H



. ∴ -∴ -----JARRAH 2 STRIP RFD4603H

READYFLOR 3 STRIP

Stunning floors made from some of the world's finest hardwoods.

220 x 19 cm = 14 mm



. ∴ √ √ TASMANIAN OAK 3 STRIP



᠅❖ BLACKBUTT 3 STRIP



. ∴ -• SPOTTED GUM 3 STRIP



.☆-*-*◇-SYDNEY BLUE GUM 3 STRIP



<u>-∽</u>-MERBAU 3 STRIP



JARRAH 3 STRIP









PALAZZO Elegant oak planks



FROZEN OAK EXTRA MATT

PAL3562H VIBRANT



► © △ ⁺ ❖

METALLIC OAK EXTRA MATT

PAL4118H VIRRANIT



CLAY BROWN OAK EXTRA MATT

PAL4117H VIBRANT



PURE OAK MATT

PAL1341H



FOSSIL OAK MATT

PAL1342H NATURE



MOCCA OAK MATT

PAL1348H MARQUANT



VINTAGE OAK MATT

PAL1344H MARQUANT



LIMED GREY OAK MATT

PAL1345H MARQUANT



WINTER STORM OAK EXTRA MATT

PAL3842H MARQUANT



<u>~</u> ⊚ <u>~</u> ~

OLD GREY OAK MATT

Pal1346H marquant





Remember that every timber floor is different, and will always vary from any images or samples in colour grain and features. The illustrated patterns and colours are only an image and not a full overview of all the different nuances within the natural unique design of a timber floor. For a representative view of the surface structure and variation of a plank, take a look at the big samples on display and ask your retailer for more advice.



PAINTED WHITE OAK EXTRA MATT VAR3445H MARQUANT



CHAMPAGNE BRUT OAK EXTRA MATT VAR3446H MARQUANT



ROYAL GREY OAK EXTRA MATT VAR3447H MARQUANT



ESPRESSO BLEND OAK EXTRA MATT VAR3448H MARQUANT

COMPACT

*COM (AUSTRALIAN)





WINTRY FOREST OAK EXTRA MATT
COM3845
MARQUANT



CREAMY WHITE OAK EXTRA MATT
COM3851
MARQUANT



PURE OAK EXTRA MATT
COM3849
MARQUANT



NATURAL OAK EXTRA MATT COM3844 MARQUANT



CLIFF GREY OAK EXTRA MATT
COM3850
MARQUANT



SLATE GREY OAK EXTRA MATT COM3846 MARQUANT



BLACKBUTT
COM3858
PER AS2796 STANDARD AND BETTER



SPOTTED GUM
COM3859
PER AS2796 STANDARD AND BETTER

STEP 1 INSTALLATION

Install your floor without a hassle!

Laying a Quick-Step floor is so easy thanks to the patented world-famous Uniclic® Multifit click system. This system is highly user-friendly, quicker to install and a lot more solid than other systems. A Quick-Step floor makes installation easy, even in the tightest corners or under doors.

Effortless installation, thanks to the Uniclic® Multifit click system

Quick-Step is the inventor of the Uniclic® Multifit installation system, today the standard click-to-install system. Use this revolutionary and patented click system to effortlessly click your floor planks together.

2 Install your floor anywhere, even on floor heating

Quick-Step Timber floors are perfect for installing over floor heating when combined with the right underlay. Some species are not suitable, see page 18.

3 Watch the videos

See for yourself how easy it is to install a Quick-Step floor in our installation videos. Discover them on www.quick-step.com.au.





Installation tools

Install your timber floor in an easy and professional way with the handy Quick-Step installation tools.





Quick-Step® **HANDSAW**

Handy handsaw used to undercut door frames.



Quick-Step® INSTALLATION KIT

Includes a special Uniclic® tapping block, pulling tool and spacing wedges.



For a perfect installation, check out the installation videos on www.quick-step.com.au



Underlay is not an idle luxury



CLICK on timber

Installing your timber floor is easy thanks to the patented Uniclic® Multifit click system. A good underlay has a major impact on the final look, walk sound, quality and comfort of your Quick-Step Timber floor.

- · Maintain their initial thickness over the years and provide excellent acoustic insulation, keeping your floor quieter underfoot.
- Levels and helps to prevent small irregularities.
- Comes with a self-adhesive strip and a pre-integrated damp proof membrane (DPM) which protects your floor from rising damp, with a water vapour resistance of greater than SD>75m, meeting all European recommendations.
- Suitable for floor heating and/or cooling.
- Offers a stable base which supports your floor in instances of dropped items or temporary heavy loads.



Quick-Step® COMBI-LAY STANDARD

Contents: 1 roll = 20 or 50 m^2 Thickness: 2 mm

Combi-Lay Standard is no normal underlay. The dense, closed cell polyolefin foam provides excellent support, with good reduction of both reflected and impact noise.



For the best results always start with a level subfloor. Make sure it's completely dry as well. For more advice about preparing your subfloor, visit www.quick-step.com.au or your local Quick-Step retailer.



GLUE

Quick-Step Timber can also be glued down using Quick-Step Parquet Adhesive.

- Spreads easily and guarantees great adhesion.
- Suitable for floor heating and/or cooling.

Please note: Contact your Quick-Step retailer for more details on gluing a Quick-Step Timber floor.



Quick-Step® QUIET-STEP COMBI-LAY

Contents: 1 roll = 20 or 50 m² Thickness: 2 mm

Quiet-Step Combi-Lay is the first choice where a quiet walking sound and maximum reduction in multi-storey noise is required. This high density underlay has no match when it comes to reducing foot fall noise, with a reduction of up to 30% over standard underlays. Ideal for installation in multi-storey apartments where noise transfer can be an issue.



Finish beautifully

Finish your floor beautifully with the Quick-Step scotia and profiles.

Finishing profiles for floor and stairs

Quick-Step's Incizo® profile is a multifunctional finishing tool. The same profile can be used for all the finishes of your floor and stairs, in the matching colour. Simply cut the Incizo® basic profile to the shape required using the special cutter supplied in every Incizo pack.

Quick-Step® Incizo®: five questions, one answer



- 1 How can I join two floors 2 How can I solve variations 3 How do I finish my floor of the same height?
 - in height from one floor to another?
- along a wall or a window?
- 4 How can I connect my floor to a carpet, and have a beautiful finish?












Use the Incizo® profile cut as an Use the Incizo® profile cut as an expansion profile. adapter profile.



Use the Incizo® profile cut as an end profile.



Use the Incizo® profile cut as a transition profile.





For safety reasons, always glue the floor panels on the stairs of your staircase.

5 What about the finishing of my stairs?

You can cover your stairs or steps with Quick-Step planks and finish in the style of your choice using the Incizo® profile as a stair nose. Remember to order the Incizo aluminium sub-profile for stair installations.









Quick-Step®
INCIZO® PROFILE
QSWINCP(-)
215 cm x 5.4 cm x 1.7 cm
Contents: 1 Incizo®, 1 cutter, 1 plastic rail, screws and plugs



NEWINCPBASE(-) 215 cm x 1.9 cm x 7.35 cm To be ordered separately.

The Incizo® stairs finishing cannot be used for commercial applications.



Discover our installation videos on www.quick-step.com.au

Scotia



Quick-Step® SCOTIA 240 x 1.7 x 1.7 cm

The veneer timber scotia is perfect for covering expansion gaps along skirting boards.

Skirting



Quick-Step® FLEXIBLE SKIRTING

 $700 \times 1.4 \times 4$ cm (to be cut to the desired length)

A beautiful finish for round pillars or curved walls.

STEP 3 CLEANING

Keep your floor in top condition



Quick•Step® CLEANING KIT

Contents: mop holder, washable microfibre mop, Quick-Step Cleaning product 1000 ml

The cleaning products are specifically developed for Quick-Step floors. They cleanse the floor surface thoroughly and maintain the original look of your floor. No residual layers of cleaning product are left behind.



Also available separately:

Quick-Step®
CLEANING PRODUCT 1000 ML
QSCLEANING 1000

Quick•Step®
CLEANING MOP
QSSPRAYMOP



Quick-Step® REPAIR KIT

QSREPAIR

Contents: melting knife, cleaning comb, 7 wax blocks, sanding pad

Light damages can easily be repaired in the original colour with the Repair Kit. Simply recreate the colour of your damaged planks with one of the seven wax pieces selected to cover all Quick-Step colours. Check the specific colour combination for your floor on www.quick-step.com.au




Check the specific colour combination for your floor on www.quick-step.com.au



Tips to keep your floor in top condition: Placing dirt trapping mats at external entrances and felt floor protectors under all furniture is recommended. Where possible, use rubberised castors and wheels designed for hard flooring and vinyl chair mats under castor wheels and office chairs. Remove small stones and grit with a soft bristle broom or vacuum to help prevent scratching. Quick-Step Timber should also be protected from excessive heat and sunlight. The use of steam mops and stiletto heels should also be avoided at all times. For regular maintenance, use the Quick-Step Timber Cleaning Kit for best results. (For full maintenance guidelines go to www.quick-step.com.au)

There is no substitute for quality

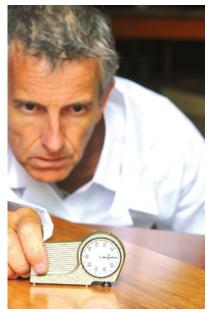


When looking at any pre-finished timber floor it is important to pay serious attention to the wear resistance of the coatings used. After all, it is the coating that will afford protection to the timber surface of your floor and the better the quality of the finish used, the longer your floor will look its very best.

Wear resistance, or abrasion resistance, is tested using a taber abrasion machine that simulates day to day wear of the coating system. Taber testing is universally recognised as the best testing method to evaluate the wear performance of a floor covering. In essence, the better the abrasion resistance, the longer your floor will hold its initial gloss level and the longer the coating will last before wearing through to raw timber.

Most competitors use a standard "off the shelf" finish that wears reasonably well, but that's simply not good enough for the designers at Quick-Step.

SRT Finish is a specifically formulated, high performance lacquer that has been developed in Europe and used on all lacquered Quick-Step Timber floors. Laboratory tests clearly demonstrate that Quick-Step's SRT Finish outperforms the competitors, ensuring that when you choose a Quick-Step floor, you are selecting a timber floor with only the best available pre-finished coatings available. What's more, SRT is able to be re-coated using a wide selection of local finishes, meaning trouble free maintenance when it comes time to replenish the coated surface of your floor in years to come.

A heart for nature

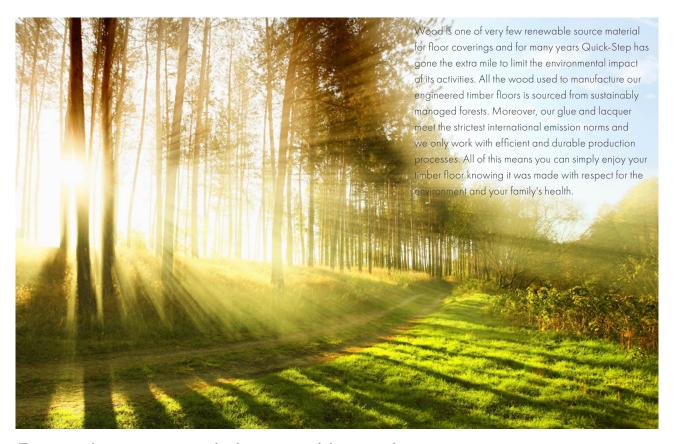

- ☑ More than 75% recycled, sustainable wood
- We use carefully screened raw materials
- ☑ We invest in energy-efficient production

Matching Accessories Guide

Flawlessly matching accessories are available in all Quick-Step timber products. Quick-Step is committed to perfecting all aspects of flooring by meticulously colour-matching trims and profiles for all applications including stairs across all timber ranges.

Product code	Product description	Quick-Step Scotia More info see page 27	Quick-Step Incizo® More info see page 26-27
eadyFlor XL 1-strip			
RFXL3847H	BLACKBUTT	QSWSCOT01865	QSWINCP01865
RFXL3848H	SPOTTED GUM	QSWSCOT01866	QSWINCP01866
eadyFlor 1-strip			
RF\$4599H	MERBAU	QSWSCOT 013 <i>57</i>	QSWINCP01357
RFS4600H	BLACKBUTT	QSWSCOT01871	QSWINCP01871
RFS4601H	SPOTTED GUM	QSWSCOT01872	QSWINCP01872
RFS4602H	tasmanian oak	QSWSCOT01874	QSWINCP01874
RFS4603H	JARRAH	QSWSCOT01873	QSWINCP01873
RFS4604H	SYDNEY BLUE GUM	QSWSCOT 01875	QSWINCP01875
RFS4605H	MATT BRUSHED BLACKBUTT	QSWSCOT 01865	QSWINCP01865
RFS4606H	MATT BRUSHED SPOTTED GUM	QSWSCOT01866	QSWINCP01866
eadyFlor 2-strip			
RFD4599H	MERBAU	QSWSCOT 01357	QSWINCP01357
RFD4600H	BLACKBUTT	QSWSCOT01871	QSWINCP01871
RFD4601H	SPOTTED GUM	QSWSCOT01872	QSWINCP01872
RFD4602H	tasmanian oak	QSWSCOT01874	QSWINCP01874
RFD4603H	JARRAH	QSWSCOT 01873	QSWINCP01873
RFD4604H	SYDNEY BLUE GUM	QSWSCOT 01875	QSWINCP01875
RFD4605H	MATT BRUSHED BLACKBUTT	QSWSCOT01865	QSWINCP01865
RFD4606H	MATT BRUSHED SPOTTED GUM	QSWSCOT01866	QSWINCP01866
eadyFlor 3-strip			
RFT4599H	MERBAU	QSWSCOT 013 <i>57</i>	QSWINCP01357
RFT4600H	BLACKBUTT	QSWSCOT 01871	QSWINCP01871
RFT4601H	SPOTTED GUM	QSWSCOT 01872	QSWINCP01872
RFT4602H	tasmanian oak	QSWSCOT01874	QSWINCP01874
RFT4603H	JARRAH	QSWSCOT01873	QSWINCP01873
RFT4604H	SYDNEY BLUE GUM	QSWSCOT 01875	QSWINCP 01875

Product code	Product description	Quick-Step Scotia More info see page 27	Quick-Step Incizo® More info see page 26-27
alazzo			
PAL1341H	PURE OAK MATT	QSWSCOT01341	QSWINCP01341
PAL1342H	FOSSIL OAK MATT	QSWSCOT 01342	QSWINCP01342
PAL1344H	VINTAGE OAK MATT	QSWSCOT01344	QSWINCP01344
PAL1345H	LIMED GREY OAK MATT	QSWSCOT 01345	QSWINCP01345
PAL1346H	OLD GREY OAK MATT	QSWSCOT 01346	QSWINCP01346
PAL1348H	MOCCA OAK MATT	QSWSCOT 01348	QSWINCP01348
PAL3562H	frozen oak extra matt	QSWSCOT 03562	QSWINCP03562
PAL3842H	WINTER STORM OAK EXTRA MATT	QSWSCOT03842	QSWINCP03842
PAL4117H	CLAY BROWN OAK EXTRA MATT	QSWSCOT04117	QSWINCP04117
PAL4118H	METALLIC OAK EXTRA MATT	QSWSCOT04118	QSWINCP04118
vAR3445H	PAINTED WHITE OAK EXTRA MATT	QSWSCOT 01629	QSWINCP01629
VAR3446H	CHAMPAGNE BRUT EXTRA MATT	QSWSCOT 01630	QSWINCP01630
VAR3447H	ROYAL GREY OAK EXTRA MATT	QSWSCOT 01631	QSWINCP01631
VAR3448H	ESPRESSO BLEND OAK EXTRA MATT	QSWSCOT 01632	QSWINCP01632
ompact			
COM3844	NATURAL OAK EXTRA MATT	QSWSCOT 01334	QSWINCP01334
COM3845	WINTER FOREST OAK EXTRA MATT	QSWSCOT01340	QSWINCP01340
COM3846	SLATE GREY OAK EXTRA MATT	QSWSCOT03846	QSWINCP03846
COM3849	PURE OAK EXTRA MATT	QSWSCOT01341	QSWINCP01341
COM3850	CLIFF GREY OAK EXTRA MATT	QSWSCOT 03017	QSWINCP 03017
COM3851	CREAMY WHITE OAK EXTRA MATT	QSWSCOT 03098	QSWINCP03098
COM3858	BLACKBUTT	QSWSCOT 01865	QSWINCP01865
COM3859	SPOTTED GUM	QSWSCOT01866	QSWINCP01866

Timber

COLLECTION 2019 - 2020











Too many options to choose from?

Not sure which floor is your absolute favourite? The RoomViewer helps you make your choice. Try out your options on www.quick-step.com.au



Choose a Quick·Step® Master Installer

Once you have chosen the perfect Quick-Step floor, your installation is the next important step. Choose a Quick-Step Master Installer who will install your floor to the highest standard and with the necessary attention to detail it deserves. Even more, the Quick-Step Master Installers offer a liftetime installation warranty. Find a Master Installer in your area on www.quick-step.com.au



Quick·Step® is brought to you by Premium Floors Australia

New South Wales Tel.: (02) 9982 3777 Victoria & Tasmania Tel.: (03) 9798 0808 Queensland Tel.: (07) 3273 3111 South Australia & Northern Territory Tel.: (08) 8262 8666 Western Australia Tel.: (08) 9240 1966 Commercial division Tel.: (03) 9798 0808

Your Quick-Step® point of sale



FOLLOW US ON

f www.facebook.com/QuickStepFloors 🏧 www.youtube.com/quickstepfloor www.youtube.com/PremiumFloorsAU



